

Figure 1

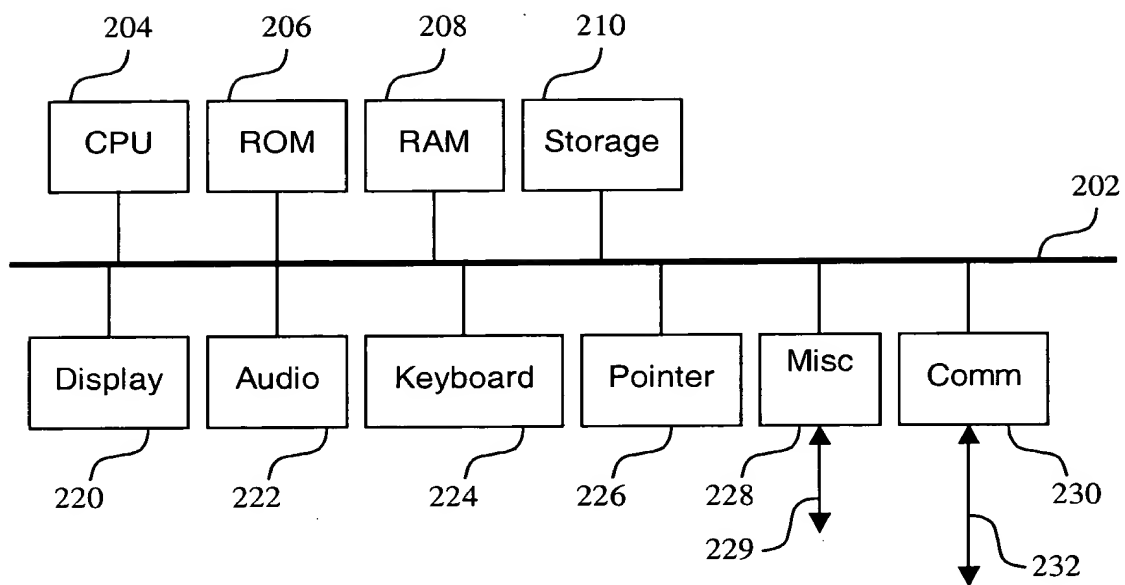


Figure 2

006260" 2654960

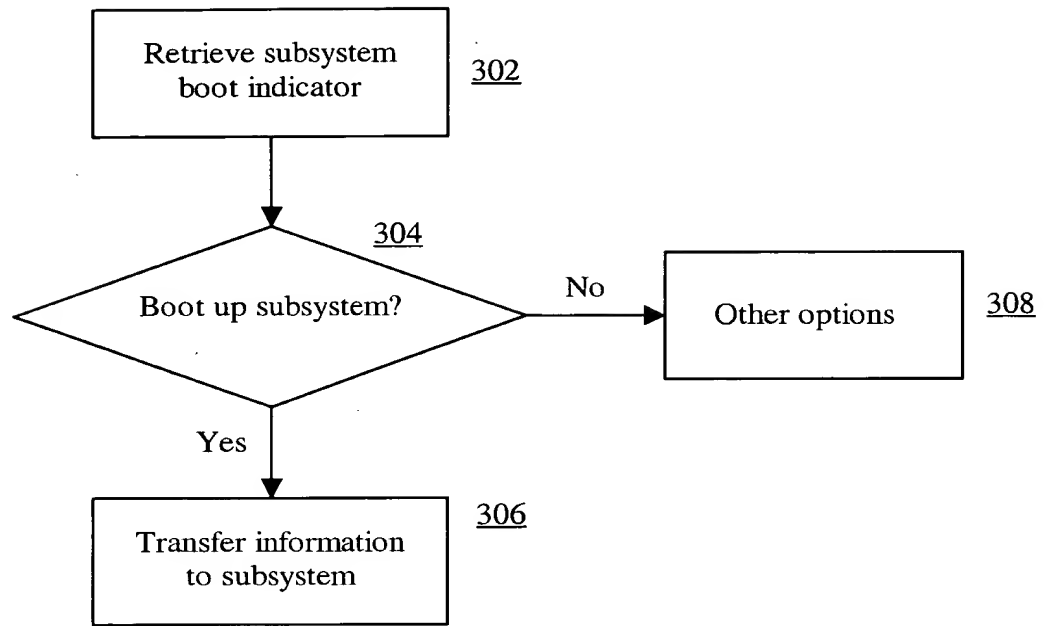


Figure 3

006260" 2654960

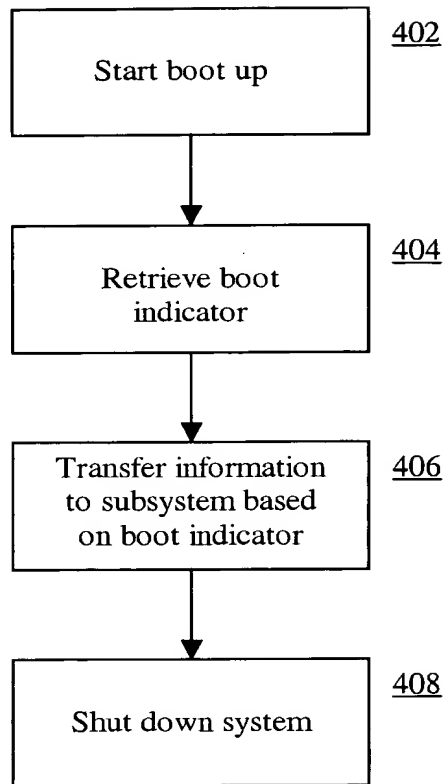


Figure 4

Retrieve subsystem
boot indicator 502

Boot up subsystem? 504

No

Other options 508

Yes

Retrieve information
from main system
storage 506

Transfer and store
information to
subsystem 510

Boot subsystem
using transferred
information 512

Figure 5

006260" 2652950

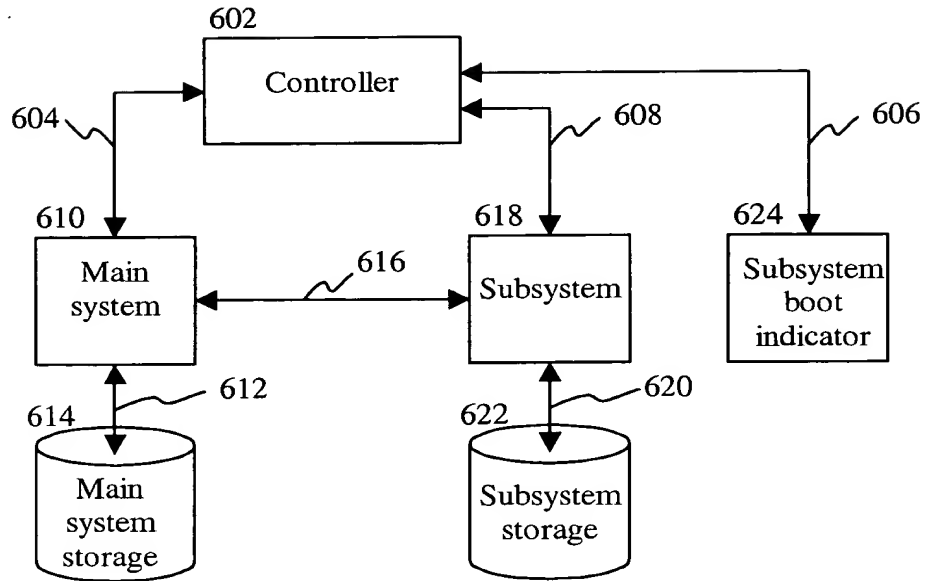


Figure 6

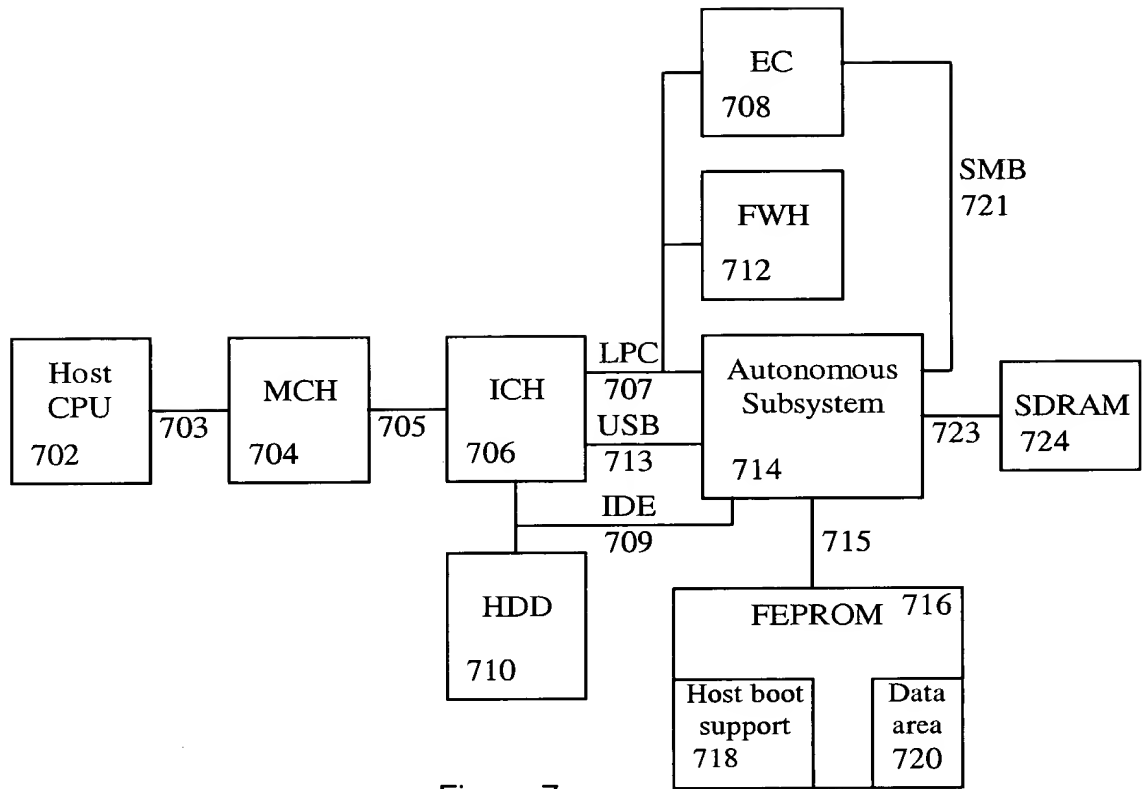


Figure 7